 

 



 

 



 

 

 
 
 


 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Power Tv	 + 	Shift + Power
	AV Tv		AV / Input / RDS
	1		1
	2		2
	3		3
	PR+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR- Tv		CH- / Page-
	7		7
	8		8
	9		9
	Vol+ Tv		Vol+
	0		0

 

 



 

 

 













 



 





Originalfernbedienung Ersatzfernbedienung

	Mute Tv		Mute / Dimmer
	Vol- Tv		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Display		Display / Media
	Up		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Disc Menu		D.Menu / Top
	Down		Down



 







 



 



 



 





 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/VCR		TV/Radio /
	0		0
	<<		<< / Tune-
	>>		>> / Tune+
	Pause/Step		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Stop		Stop / Hold
	CLK/CNT		Display / Media
	Up		Up
	PR/TRK+		CH+ / Page+
	i		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	PR/TRK-		CH- / Page-
	Down		Down
	O)))/Audio		Audio / Lang I/II
	Rec/ITR		Rec / Rec Mode
	Lock		Back / Return
	Search		Red / Netflix / Search
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat



