 



 

 

 
 
 
 
 

 

 

 
 
 

 
 
 
 
 
 


 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Yellow		Yellow
	Blue		Blue
	Green		Green
	EPG		Guide
	Subtitle		Subt
	TTX		Text
	Audio		Dual
	i		Info
	FAV		Pre Ch
	Tv/Radio		TV/R





**Originalfernbedienung Ersatzfernbedienung**

	Video		Smart
	Scan		Media
	Device		Options
	File		List
	Zoom		Eject
	Roll		AV
	Record		Rec
	Prev.		I<<
	Next		>>I
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>

**Originalfernbedienung Ersatzfernbedienung**