


 










 









 


 

 


 










 

 


 



 


 


 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Up		Up
	Down		Down
	Right/[≡o]		Right
	Left/[≡+]		Left
	Menu		Menu
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Recall/[≡?]		Pre Ch
	Sleep/[≡◆]		Sleep
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input/[/≡]		AV
	Normal/OK/[≡i]		Ok
	[≡]		Text
	[≡x]		Format
	Red/Skip		Red
	Green/Move		Green
	Yellow/Delete		Yellow
	Blue/Mode		Blue

