





 





 

 







 

 

 











**Originalfernbedienung Ersatzfernbedienung**

	Source		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	PRE-CH		Back / Return
	HDMI		Shift + 0
	YPbPr		Setup / OPT /
	Video		Shift + 4

**Originalfernbedienung Ersatzfernbedienung**

	PC		Shift + Fav / Marker / PC
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Zoom		Zoom / Size
	CH-		CH- / Page-
	Dual		Audio / Lang I/II
	ADJ Audio		Sound / Title
	ADJ Video		Picture / Format
	Sleep		Sleep / Timer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu/Exit		Menu / Home
	Menu/Exit		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Teletext		Text / Goto
	Mix		Shift + Text /
	Size		Shift + Zoom /
	Subpage		>> / Tune+
	Index		Play / Slow
	Subtitle		Subtitle / EQ
	Hold		Stop / Hold
	Reveal		<< / Tune-
	FAV		Fav / Marker / PC
	CH-List		Smart / List
	AD		Shift + Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Freeze		Pause / Step / Freeze
--	--------	--	-----------------------

