 

 

 



 

 

 

 
 
 



 

 



 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SD Card		Display / Media
	Input TV		TV/Radio /
	Input AV		AV / Input / RDS
	Menu		Menu / Home
	[+]/Aspect		Picture / Format
	N		Sound / Title
	Direct Rec TV		Shift + Rec / Rec Mode
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Viera Tools		D.Menu / Top
	Viera Link		Smart / List
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK		OK
	Right		Right

 



















 


 






 
 

 



Originalfernbedienung Ersatzfernbedienung

	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	[≡◆]/STTL		Subtitle / EQ
	[≡i]/Index		Eject / Surround
	[≡+]/Hold		Shift + Stop /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6









Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Recall/Last View		Fav / Marker / PC
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Power Down	 + 	Shift + Power
	PR- Down	 + 	Shift + CH- /
	PR+ Down	 + 	Shift + CH+ /
	<< / I <<		<< / Tune-
	Play		Play / Slow
	>> / >> I		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	> / Step		Pause / Step / Freeze
	Rec		Rec / Rec Mode

