 
 



 
 
 
 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Subtitle		Subt
	[ ]/Ratio		3D
	Input		AV
	Tv/Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	FAV		Pre Ch
	Guide		Guide
	P+		Ch +
	P-		Ch -
	Info		Info
	Smart		Smart
	My APPS		Media
	Back		Back
	Settings		Options
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left



