 

 













 





 


 

 



 

 















 

 









 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Disc/Pop Up Menu		Shift + Menu /
	Radio		TV/Radio /
	Audio Source		AV / Input / RDS
	USB		Shift + 8
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Menu / Home
	Top Menu		D.Menu / Top
	Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Down		Down
	Info		Info / Angle
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	I<		I<< / Preset-
	I>		I>> / Preset+
	Mute		Mute / Dimmer
	Vol+		Vol+
	Surr. Sound		Shift + Eject / Surround
	Treble		Zoom / Size
	Vol-		Vol-
	Sound Mode		Sound / Title
	Bass		Picture / Format





Originalfernbedienung Ersatzfernbedienung

1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
AUDIO	Audio	LANG I/II	Audio / Lang I/II
0	0	HDMI - BAT	0
SUBTITLE	Subtitle/program	EQ	Subtitle / EQ
AUDIO SYNC	Audio Sync	SHIFT + LANG I/II	Shift + Audio / Lang I/II
BONUS VIEW	Bonus View	TIMER SLEEP	Sleep / Timer
HDMI	HDMI	SHIFT + HDMI - BAT	Shift + 0
REPEAT	Repeat	SHIFT + APP REPEAT	Shift + Green / APP /

Originalfernbedienung Ersatzfernbedienung

