














 

 

 





 

 

 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Tv/Radio |  | TV/R |
|  | ←PR |  | Back |
|  | EPG |  | Guide |
|  | Menu |  | Menu |
|  | FAV |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Exit |  | Exit |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol+ |  | Right |
|  | Vol- |  | Vol - |
|  | Vol- |  | Left |
|  | OK/List |  | Ok |
|  | ↑ |  | Up |
|  | ↓ |  | Down |
|  | Pause |  | Pause |
|  | Red/Find |  | Red |
|  | Green/Zoom |  | Green |
|  | Yellow/TXT |  | Yellow |
|  | Blue/Audio L/R |  | Blue |
|  | SAT |  | Media |
|  | Tv/AV |  | AV |



