

 

 







 



 

 

 



 



 

 

 





Originalfernbedienung Ersatzfernbedienung

 







 

 

 

 

 

 
 
 
 

 





 





	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Language		Audio / Lang I/II
	7		7
	8		8
	9		9
	OSD		Display / Media
	0/10		0
	10+		Guide / EPG / -/-
	Clear		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung



	Prog		TV/Radio /
	Setup		Setup / OPT /
	Up		Up
	DVD/USB		AV / Input / RDS
	DVD/USB		Shift + 2
	DVD/USB		Shift + 8
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Mute		Mute / Dimmer
	<</Rev		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<</Prev		I<< / Preset-




**Originalfernbedienung Ersatzfernbedienung**

	Search		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	>>/Fwd		>> / Tune+
	>>I/Next		>>I / Preset+
	Vol-		Vol-
	Vol+		Vol+
	Title		Sound / Title
	Return		Back / Return
	V-Mode		Picture / Format
	Slow	 + 	Shift + Play /
	A-B		Yellow / YouTube / Repeat
	RAN		Text / Goto
	N/P		CH+ / Page+
	L/R		CH- / Page-
	Angle		Info / Angle
	Zoom		Zoom / Size
	Resume		Smart / List

**Originalfernbedienung Ersatzfernbedienung**

	Remain		D.Menu / Top

