



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV	 + 	Shift + Pre Ch
	Recall		Pre Ch
	Game		Media
	Auto		Smart
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up / CH + / I<<		Up
	Down / CH - / >>I		Down
	Right / Vol +		Right
	Left / Vol -		Left
	OK		Ok
	Up / CH + / I<<		I<<
	Down / CH - / >>I		>>I
	Up / CH + / I<<		Ch +
	Down / CH - / >>I		Ch -
	Left / Vol -		Vol -
	Right / Vol +		Vol +
	Red / Zoom		Red
	Green / Lan/Audio		Green
	Yellow /		Yellow



Play/Pause



Originalfernbedienung Ersatzfernbedienung

TEXT 	Blue / Text		Blue
ZOOM 	Red / Zoom		Eject
LAN/AUDIO 	Green / Lan/Audio		Dual
PLAY/PAUSE 	Yellow /		Play
PLAY/PAUSE 	Yellow /		Pause
TEXT 	Blue / Text		Text
TV/RADIO 	<< / Tv/Radio		<<
TV/RADIO 	<< / Tv/Radio		TV/R
SUBTITLE 	>> / Subtitle		>>
SUBTITLE 	>> / Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

