


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------------|
|  | Power |  | Power |
|  | PBC |  | Green |
|  | Display |  | Info |
|  | Eject |  | Eject |
|  | Subtitle |  | Subt |
|  | Search |  +  | Shift + TV/R |
|  | Angle |  | Red |
|  | Language |  | Dual |
|  | Setup |  | Options |
|  | Title |  | Back |
|  | Menu |  | Menu |
|  | Zoom |  +  | Shift + Eject |
|  | Resume |  | TV/R |
|  | Pause |  | Pause |
|  | Slow |  | Exit |
|  | Stop |  | Stop |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------------|
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Play |  | Play |
|  | I<< |  | I<< |
|  | I>> |  | I>> |
|  | << |  | << |
|  | >> |  | >> |
|  | All |  | Text |
|  | A-B |  +  | Shift + Play |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | Mute |  | Mute |
|  | +10 |  | Guide |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-------|
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | P.Scan |  | Media |
|  | Program |  | Sleep |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

