



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	CD		Red
	Play/Pause		Play
	Bluetooth/FM		Green
	>>I		>>I
	I<<		I<<
	Preset/Album		Up
	Preset/Album		Down
	Stop		Stop
	Repeat		Text
	Shuffle		Media
	Mute		Mute
	Sound		Dual
	Display		Info
	Prog		Sleep

**Originalfernbedienung    Ersatzfernbedienung**

	Clock		D. Menu
	Sleep/Timer		AV
	USB/Audio In		Yellow
	Play/Pause USB		Pause
	Stop USB		Shift + Stop
	>>I USB		>>
	I<< USB		<<
	Preset/Album Up		Ch +
	Preset/Album Down USB		Ch -
	Repeat USB		Shift + Text
	Shuffle USB		Guide
	Display USB		Shift + Info
	Prog USB		Shift + Sleep
	Open/Close USB		0
	Power USB		Shift + Power
	Power		Smart

