 







 
 

 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	HDMI ARC		1
	Bluetooth		3
	AUX/Audio In		4
	USB		2
	Coax/Optical		5
	I<		I<<
	Play		Play
	Pause		Pause
	>I		>>I
	Bass+		Up
	Bass-		Down
	Vol+		Vol +
	Vol-		Vol -
	Treble+		Ch +
	Treble-		Ch -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Sound		Dual
	Surr		Subt
	DIM		Smart
	Night Mode		Media

