

 

 

 
 
 

 
 


 

 

 
 
 
 
 
 
 
 

 









 
 
 
 


 
 
 
 
 
 

 

 

 
 

 
 
 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Cable		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	Home		Smart
	Bach		Back
	Exit		Exit
	Guide		Guide
	[::]		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Mouse Up		>>
	Mouse Down		<<
	3D		3D
	Micro		Dual
	*		Menu





**Originalfernbedienung   Ersatzfernbedienung**

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung   Ersatzfernbedienung**