











































Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Tv/AV		AV / Input / RDS
	Multimedia		Display / Media
	I/II		Audio / Lang I/II
	List		Smart / List
	QView		D.Menu / Top
	Menu		Menu / Home
	Up		Up
	PR+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Stop		Stop / Hold
	Right		Right
	Vol+		Vol+
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SSM		Sound / Title
	0		0
	PSM		Picture / Format
	Sleep		Sleep / Timer
	ARC		Info / Angle
	[≡]/Text		Text / Goto
	[≡x]/Update		<< / Tune-



