 


 




 
 




Originalfernbedienung **Ersatzfernbedienung**

	Power		Power
	Audio In		Red
	USB		Green
	Coax		Yellow
	AUX		Blue
	OPT		Options
	Repeat		Text
	Play		Play
	Pause		Pause
	>		>>
	<		<<
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Audio Sync+		Ch +
	Audio Sync-		Ch -
	Bass+		Up

Originalfernbedienung **Ersatzfernbedienung**

	Bass-		Down
	Treble+		Right
	Treble-		Left
	Surr		Smart
	Night		Media

