




 

 

 

 
 


 

 

 

 

 
 
 
 

 

 
 



 

 



 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Radio/Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Text
	Open/Close		Eject
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Scan >>		>>
	<< Scan		<<
	Skip >>I		>>I
	I<< Skip		I<<
	Rec		Rec
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info/Display		Info
	Home		Smart
	Return		Back
	Disc Menu		D. Menu
	Title/PopUp		List
	Sound Effect		Dual
	Optical		Options
	Music ID		Subt



