 


















 


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Text / Goto
	Source/Audio		AV / Input / RDS
	Radio		Zoom / Size
	USB		Display / Media
	Sleep		Picture / Format
	Disc		D.Menu / Top
	[≡]/Setup		Menu / Home
	Up		Up
	Left/<<		Left
	OK		OK
	Right/>>		Right
	Back		Back / Return
	Down		Down
	[i]/Info		Info / Angle
	I<		<< / Tune-
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	>		>> / Preset+
	Mute		Mute / Dimmer
	Stop		Stop / Hold
	Vol+		Vol+
	Sound		Audio / Lang I/II
	Surr		Guide / EPG / -/--
	Vol-		Vol-
	Audio Sync		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



