



 
 
 

 
 
 



 

 
 

 
 
 

 


 
 












 


 
 


 
 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Last View		Pre Ch
	AV Mode		Shift + AV
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -




Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Menu		Menu
	EPG		Guide
	[≡]		Text
	End		Exit
	Back		Back
	Home		Smart
	3D		3D
	Netflix		Media
	▼/O/I/II/I+II		Dual
	[<>]		Format
	APP		Shift + Media
	Eco		Shift + 3D
	[...]		Subt
	[≡?]		Options
	[≡o]		List





Originalfernbedienung Ersatzfernbedienung

	[≡+]		Sleep
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Radio		TV/R
	SAT		Eject
	DTV		Shift + Pre Ch
	ATV		Shift + Guide
	P.Info		Shift + Info
	[i+]		Info
	Control		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Power Ext		Shift + Power
	Rec		Rec
	Play		Play
	<<		<<
	>>		>>
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Pause		Pause
	Rec Stop		Shift + Stop
	←		Shift + Left
	→		Shift + Right

