

 

 











 




 





 








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV / Input		AV
	<< Scan		<<
	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I

**Originalfernbedienung Ersatzfernbedienung**

	Pause / Step		Pause
	Play		Play
	Stop		Stop
	Home		Smart
	Menu / List		Menu
	List		List
	Up		Up
	PR / CH+		Ch +
	PR / CH-		Ch -
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Display		Info
	Return		Back
	O))) / Audio		Dual
	[...] / Subtitle		Subt



