




 

 









 



 
 
 





 



 

 





 

 

 
 
 
 
 

 


 
 

 


 

 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Digital/Analog		TV/R
	Sync Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit		Exit
	[≡]/Text		Text
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Netflix		Media
	[i+]/[?]		Info
	Home		Smart
	Sleep		Sleep
	Guide		Guide
	Return		Back
	Options		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -



