


 
 

 

 

 

 

 

 




 
 
 

 
 







 





 
 

 


 
 

 



 
 

 







 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Smart
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	P+		Ch +
	P-		Ch -
	CH List		List
	Menu		Menu
	FAV CH		Shift + Pre Ch
	Tools		Options
	Return		Back
	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Yellow		Yellow
	Blue		Blue
	TTX/Mix		Text
	Media.P		Media
	P.Size		Format
	Dual		Dual
	Guide		Guide
	Subt.		Subt
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

