



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Eco		D.Menu / Top
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Option		Setup / OPT /
	OK		OK
	Up		Up
	Down		Down
	PR+		CH+ / Page+
	Right/Zoom+		Right
	Left/Zoom-		Left
	PR-		CH- / Page-
	Info		Info / Angle
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	List		Smart / List
	Red		Red / Netflix / Search
	TV		Display / Media





Originalfernbedienung    Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	O)Lang		Audio / Lang I/II
	Blue		Blue / Prime Video / Random

Originalfernbedienung    Ersatzfernbedienung


