
 
 
 



 





 




 

 




 
 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input TV		TV/R
	Input		AV
	ARC		Media
	*+		Shift + Right
	-*		Shift + Left
	Text		Text
	PIP		3D
	Size		Format
	Position		Options
	Red/PIP PR-		Red
	Green/PIP PR+		Green
	Yellow/Swap		Yellow
	Blue/PIP Input		Blue
	Exit		Exit
	List		List
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	I/II		Dual
	Sleep		Sleep
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	Q.View		Smart
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

 

 

 

 

 

 
 


5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
FAV	FAV	PRE-CH	Pre Ch
TIME	Time	SHIFT + TIMER AV	Shift + AV
REVEAL	Reveal	AD SUBT	Subt
INDEX	Index	DISPLAY INFO	Info




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop
	Play		Play
	Pause		Pause
	l<<		l<<
	<<		<<
	>>		>>
	>>		>>
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3







 

 
 


 
 


 


 


 

 

 


 




Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	Stop		Stop
	Play		Play
	Pause		Pause
	Rec		Rec
	<<		<<
	>>		>>
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0

