


 

 

 

 



 



 










 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		1
	BD/DVD		2
	YIT		3
	Clear Voice		Guide
	Uni Volume		0
	Audio Delay		Pre Ch
	Surround		Dual
	Stereo		Subt
	Subwoofer+		Ch +
	Subwoofer-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tv Remote Control Learn		Options
	Tv Remote Control Repeater		TV/R

Originalfernbedienung Ersatzfernbedienung

