





















































 

















Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Home	 Menu / Home
 [I]	 Guide / EPG / -/--
 Up	 Up
 I<	 I<< / Preset-
 I<	 CH- / Page-
 Left	 Left
 OK	 OK
 Right	 Right
 >I	 >>I / Preset+
 >I	 CH+ / Page+
 Down	 Down
 Back	 Back / Return
 [*]/Option	 Setup / OPT /
 III	 Smart / List
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Originalfernbedienung	Ersatzfernbedienung
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [...]	 Subtitle / EQ
 0	 0
 [<>]	 Picture / Format

