
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Top Menu		D.Menu / Top
	Subtitle		Shift + Subtitle / EQ
	Display		Display / Media
	Setup		Setup / OPT /
	1		1
	2		2
	3		3
	Disc		Smart / List
	4		4
	5		5
	6		6
	>10/-/-		Guide / EPG / -/-
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Pro Logic		Sound / Title
	CH Select		TV/Radio /
	Test		Text / Goto
	Super SRND		Eject / Surround
	Menu		Menu / Home
	EQ		Subtitle / EQ
	Up		Up
	Shift Up		Shift + Up
	Return		Back / Return
	Super Sound EQ		CH+ / Page+
	Left		Left
	Shift Left		Shift + Left
	Enter		OK
	Right		Right
	Shift Right		Shift + Right
	S.3D AI EQ		Zoom / Size





Originalfernbedienung Ersatzfernbedienung

	Marker		Fav / Marker / PC
	Down		Down
	Shift Down	 + 	Shift + Down
	Angle		Info / Angle
	AV Effect		AV / Input / RDS
	VCR (EXT)/VDP		Red / Netflix / Search
	VCR (EXT)/VDP	 + 	Shift + 7
	VCR (EXT)/VDP	 + 	Shift + 4
	Tape / Deck1/2	 + 	Shift + 5
	Tape / Deck1/2		Green / APP / Repeat
	DVD	 + 	Shift + 2
	DVD		Yellow / YouTube / Repeat
	Tuner/Band		Blue / Prime Video / Random
	Tuner/Band	 + 	Shift + 6
	Play Mode	 + 	Shift + Play /
	Cancel		Exit / Cancel / Clear
	</		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Play		Play / Slow
	Audio		Audio / Lang I/II
	Mix 2CH		Picture / Format
	Digital S.Woofers		CH- / Page-
	<< Search Slow		<< / Tune-
	>> Search Slow		>> / Tune+
	Muting		Mute / Dimmer
	I<< Skip		I<< / Preset-
	>>I Skip		>>I / Preset+
	Vol-		Vol-
	Vol+		Vol+

