

 

 
 
 





 

 
 
 
 

 
 





 


 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Setup		Menu
	Option		Options
	BD/DVD		Red
	TV		Green
	CD		Yellow
	Radio		Blue

Originalfernbedienung Ersatzfernbedienung

	Audio 1		1
	Audio 2		2
	Audio 3		3
	Audio 4		4
	Audio 5		5
	Audio 6		6
	HDMI 1		7
	HDMI 2		8
	HDMI 3		9
	Tuner Tuner		Guide
	Memory Tuner		Pre Ch
	Preset Up Tuner		Ch +
	Preset Down		Ch -
	Tuning Up		>>
	Tuning Down		<<
	Info		Info
	Movie Sound		Subt





Originalfernbedienung Ersatzfernbedienung

MUSIC	Music Sound	SOUND DUAL	Dual
ENHANCER STEREO	Stereo/Enhancer Sound	PICTURE FORMAT	Format
STRAIGHT	Straight Sound	TIMER AV	AV
SUR. DECODE	Sur. Decode	ECO 3D	3D

Originalfernbedienung Ersatzfernbedienung

