



Originalfernbedienung Ersatzfernbedienung




 
	Power		Power
	Tv/DTV		TV/Radio /
	Input1		Shift + 1
	Input2		Shift + 2
	Input3		Shift + 3
	Input4		Shift + 4
	[  > < /][≡+]		D.Menu / Top
	[<> /][≡◆]		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	[i+]/Info		Info / Angle
	0		0
	P+		CH+ / Page+
	I-II		Audio / Lang I/II
	Vol+		Vol+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Return		Back / Return
	Up		Up
	Home Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	EPG		Guide / EPG / -/-





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Red Red / Netflix / Search		
	Green Green / APP / Repeat		
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	[...] EQ Subtitle / EQ		
	[≡?] MEDIA DISPLAY Display / Media		
	[≡i] LIST SMART Smart / List		
	[≡] GOTO TEXT Text / Goto		

