 


 


 



 
 
 

 
 
 




 


 
 

 
 
 

 
 
 


 
 

 
 

 
 
 


 



 



 









 
 
 

 
 
 

 

 
 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Channel -	 Ch -
 Quick Select 1	 1	 Tune +	 >>
 Quick Select 2	 2	 Tune -	 <<
 Quick Select 3	 3	 Mute	 Mute
 Quick Select 4	 4	 CH Level	 3D
 CBL/SAT	 5	 Sleep	 Sleep
 DVD	 6	 Dimmer	 Text
 Blu-ray	 7	 Search	 TV/R
 Game	 8	 Info	 Info
 AUX	 9	 Audio	 Dual
 Tv Audio	 Guide	 Back	 Back
 Tuner	 0	 Setup	 Menu
 Memory	 Pre Ch	 Vol+	 Vol +
 Band	 List	 Vol-	 Vol -
 Shift	 AV	 Up	 Up
 Mode	 Exit	 Down	 Down
 Channel +	 Ch +	 Right	 Right




Originalfernbedienung
Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Night		Options
	Restorer		Eject
	Tone		D. Menu
	< Surround		Yellow
	Surround >		Blue
	Audio Delay +		>>
	Audio Delay -		<<

Originalfernbedienung
Ersatzfernbedienung

