


 
 
 


 









 
 

 

 










Originalfernbedienung Ersatzfernbedienung

	Standby/on		Power
	Open/Close		Eject
	CD		Red
	USB		Green
	Tuner		Yellow
	Audio In		Blue
	BT Audio		Dual
	Clock/Timer		AV
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Equalizer		Options
	P.Bass		TV/R
	Bass/Treble		Subt
	Random		Media
	Clear		Exit
	Repeat		Text
	Display		Info
	Folder		Back
	Menu		Menu
	Memory/Progra		D. Menu
	Up/Tune+		Up
	Down/Tune-		Down
	Right		Right
	Left		Left
	Enter		Ok



