

 

 
 
 
 
 



 
 

 

 




 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Pic Size		Format
	Pic Mode		Shift + Format
	Sleep		Sleep
	Dual I-II		Dual
	S.Mode		Shift + Dual
	Still		Shift + Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	-/--		Shift + Guide
	PRE-CH		Pre Ch
	Keylock		Shift + TV/R
	PIP		3D
	P.Input		Subt
	P.Position		List
	P.Size		Shift + Eject
	P.Swap		Options
	TV		TV/R
	PC/HDMI		Media
	AV/Sel		Smart
	Source		AV
	Menu		Menu
	Exit		Exit
	TTX/On		Text
	Mix		Shift + Pre Ch




 


 
 



 
 






**Originalfernbedienung Ersatzfernbedienung**

	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Store		Rec
	Flop/List		Info
	Hold		Guide
	Size		Eject

**Originalfernbedienung Ersatzfernbedienung**

	Cancel		Shift + Back
	Index		Back
	Time		Shift + AV
	Reveal		D. Menu
	A1		Shift + 1
	A2		Shift + 2
	A3		Shift + 3
	A4		Shift + 4
	A5		Shift + 5
	B1		Shift + 6
	B2		Shift + 7
	B3		Shift + 8
	B4		Shift + 9
	B5		Shift + 0

