

 

 





 


 



 


 




 
 



 
 
 


 



 

 

 



 
 

 


 
 
 

 

 
 
 
 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	DVD		Smart
	Display		Info
	Disc Menu		D. Menu
	Setup		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Title		List
	Pause / Step		Pause
	Stop		Stop
	Play		Play
	I<<		I<<



 

 

 

 

 

 


 




 



 







 

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep
	Clear		Exit
	O)) / Audio		Dual
	[...] / Subtitle		Subt
	Marker		3D
	Search		TV/R



 
 
 
 
 
 
 

 

 
 
 

 


 
 
 
 
 
 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Tv / VCR		TV/R
	VCR		Smart
	AV		AV
	CLK / CNT		Info
	[i]		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Pause / Step		Pause
	Stop		Stop
	Rec / ITR		Rec
	Play		Play
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	O)) / Audio		Dual
	Search		Shift + TV/R
	C.Lock		Back
	0Z Repeat		Text
	CM Skip		Yellow



