



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	FM		Green
	CD		Yellow
	USB		Blue
	AUX/Bluetooth		Red
	Intro		Ok
	Mode		Smart
	A-B		Format
	DIM		Media
	P-EQ		Dual
	Loudness		Options
	S-Bass		Text
	Sleep		Sleep
	>>I		>>I
	Clock		3D
	Timer		AV

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause
	Stop/Pairing		Stop
	Display		Info
	Alb +		Ch +
	Alb -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Prog	+	Shift + Sleep

Originalfernbedienung Ersatzfernbedienung

