

 

 
 

 

 

 

 
 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	P.Mode		Setup / OPT /
	S.Mode		Sound / Title
	Home		Shift + Menu /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Q.View		D.Menu / Top
	0		0
	Sleep		Sleep / Timer

 


 




 





 



Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	I/II/Audio		Audio / Lang I/II
	P-		CH- / Page-
	Subtitle		Subtitle / EQ
	3D World		Display / Media
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Screen		Picture / Format
	CH List		Smart / List
	Menu		Menu / Home
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	<<		<< / Tune-
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	l<<		l<< / Preset-
	Blue		Blue / Prime Video / Random
	>>l		>>l / Preset+
	Text		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

