














 







 














 






 

 

 





 






Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	Input Select		AV / Input / RDS
	HDMI		Shift + 0
	Power		Power
	1		1
	2		2
	3		3
	Prog +		CH+ / Page+
	4		4
	5		5
	6		6
	Prog -		CH- / Page-
	7		7
	8		8
	9		9
	Time Slip		Shift + >> /
	Sat. Link		Smart / List

Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	Info		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Guide		Guide / EPG / -/-
	Top Menu		Menu / Home
	Disc Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Return / Back		Back / Return
	Red		Red / Netflix / Search



