 

 

 

 


 
 

 
 






Originalfernbedienung	Ersatzfernbedienung		
	Power		Power
	Coax		Smart
	OPT		Options
	Audio In		Dual
	Bluetooth		Up
	USB		Down
	AUX		Media
	Play		Play
	Pause		Pause
	Play/Pause		Ok
	>		>>
	>		Right
	I<		I<<
	I<		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung	Ersatzfernbedienung		
	Audio Sync+		Ch +
	Audio Sync-		Ch -
	Bass+		1
	Bass-		4
	Surr		2
	Night		5
	Treble+		3
	Treble-		6

