 



 

 

 

 

 

 

 

 

 

 

 

 



 



 

 


 


 





Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Eco		Eject / Surround
	0		0
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up



Originalfernbedienung Ersatzfernbedienung

	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Option		Setup / OPT /
	Return		Back / Return
	Vol+		Vol+
	Info		Info / Angle
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	List		Smart / List
	Tv		TV/Radio /
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Lang	 Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

