








 

 










 
 









 
 





 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause		Pause
	Recall		Back
	Fav		Pre Ch
	Menu		Menu
	i		Info

**Originalfernbedienung Ersatzfernbedienung**

	EPG		Guide
	Sat		Smart
	Exit		Exit
	Up		Up
	Prog +		Ch +
	Down		Down
	Prog -		Ch -
	Right		Right
	Vol +		Vol +
	Left		Left
	Vol -		Vol -
	Ok		Ok
	TV / Radio		TV/R
	Zoom		Eject
	Page -		I<<<
	Page -		<<<
	PIP		List




**Originalfernbedienung   Ersatzfernbedienung**

	F1		Options
	Page +		>>I
	Page +		>>
	UHF		Format
	P/N		3D
	TV/SAT		Media
	Subtitles		Subt
	Red / Audio		Red
	Audio		Dual
	Green / Mosaic		Green
	Yellow / Clock		Yellow
	Text		Text
	Blue / Text		Blue

**Originalfernbedienung   Ersatzfernbedienung**