






 

 

 

 



 

 

 

 

 



 



 






 









 

 






 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+ / Aspect		Shift + Guide
	Subtitle		Subt
	Source		AV
	- [/] - / P.STD		Shift + Format

Originalfernbedienung Ersatzfernbedienung

	- [] - / S.STD		Shift + Dual
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Program +		Ch +
	Program -		Ch -
	Exit		Exit
	Info		Info
	Setup / DVD / FAV		Options
	I/II / Audio		Dual
	[/≡] / Text		Text
	Open / Close		Eject





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	[≡x] / EPG		Guide
	[≡◆] / Title / ADD		TV/R
	Menu / SUB.		D. Menu
	[≡+] / Goto		Format
	[≡?] / Slow		Smart
	[≡o] / Repeat		3D
	[≡i] / A-B		Media
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue

