







 




 
 










 

 

 









 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	DTV		Smart
	Radio		TV/R
	USB		Options
	DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Vol +		Vol +
	Vol -		Vol -
	P.Mode		Format
	S.Mode		Shift + Dual
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	Exit		Exit
	Info		Info
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok



