



 




 

 







 





Originalfernbedienung Ersatzfernbedienung



	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	CH List		List
	Sports		Media
	Guide		Guide
	Home		Smart
	Extra		D. Menu
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow		Yellow				
	Blue		Blue				
	Settings		Options				
	AD/Subt.		Subt				
	Rec		Rec				
	Stop		Stop				
	<</ <<		<<				
	>>/>>		>>				
	Play		Play				
	Pause		Pause				

