 


 
 
 
 
 
 



 


 




 
 

 









 

 


 

 





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 HDMI/ARC	 3
 HDMI1	 1
 HDMI2	 2
 Optical	 Up
 Audio-In	 Down
 Coax	 Right
 Aux	 Left
 Bluetooth	 Ok
 On	 Smart
 Off	 Media
 Audio Sync+	 Ch +
 Auto Volume On	 List
 Auto Volume	 Sleep
 Audio Sync-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Originalfernbedienung	Ersatzfernbedienung
 Mute	 Mute
 Treble +	 6
 Treble-	 4
 Bass+	 9
 Bass-	 7
 V.Surr	 0

