



 

 

 


 

 

 

 



 

 
 
 
 
 


 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/HDD		TV/R
	Tuner		Subt
	CAM		Media
	Guide		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T/C		Pre Ch
	Back		Back

Originalfernbedienung Ersatzfernbedienung

	HDD Browser		Smart
	Disc Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	Pause		Pause
	Play		Play
	I<</Day-		I<<
	>>I/Day+		>>I
	Rec		Rec
	Back/Jump		<<
	FWD Jump		>>





Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Edit		Options
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Text		Text
	System		Menu
	[i+]/Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

