 



 
 

 
 
 

 

 

 





 
 

 

 




 
 


 
 



 
 

 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Audio In		1
	AUX		2
	Optical		3
	HDMI In		4
	Bluetooth		5
	HDMI ARC		6
	I<		I<<
	Play		Play
	Pause		Pause
	>I		>>I
	Bass+		Up
	Bass-		Down
	Treble+		Ch +
	Treble-		Ch -
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute
	Sound		Dual
	Audio Sync+		Right
	Audio Sync -		Left
	Delay Settings		Info
	Vol Settings		Menu
	Night		Back
	DIM/Exit Settings		Exit

