 





 
 


 
 
 
 




 
 










 



 
 

 


 
 



 
 
 




Originalfernbedienung Ersatzfernbedienung

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | Power    |    | Power                 |
|    | Dimmer   |    | Shift + Mute / Dimmer |
|    | 1        |    | 1                     |
|    | 2        |    | 2                     |
|    | 3        |    | 3                     |
|    | Sleep    |    | Sleep / Timer         |
|    | 4        |    | 4                     |
|    | 5        |    | 5                     |
|    | 6        |    | 6                     |
|    | Timer    |    | Shift + Sleep / Timer |
|   | 7        |   | 7                     |
|  | 8        |  | 8                     |
|  | 9        |  | 9                     |
|  | Info/Rds |  | Info / Angle          |
|  | Clear    |  | Exit / Cancel / Clear |
|  | 0        |  | 0                     |
|  | Program  |  | TV/Radio /            |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |                             |
|---|--------------|---|-----------------------------|
|    | FM Mode      |    | Shift + TV/Radio / Program  |
|    | <<           |    | << / Tune-                  |
|    | >>           |    | >> / Tune+                  |
|    | 1-All/Repeat |    | Back / Return               |
|    | Shuffle      |    | Blue / Prime Video / Random |
|    | Stop         |    | Stop / Hold                 |
|    | Play         |    | Play / Slow                 |
|    | Pause        |    | Pause / Step / Freeze       |
|    | Display      |    | Display / Media             |
|    | Menu         |    | Menu / Home                 |
|   | Up           |   | Up                          |
|  | Time Mode    |  | Text / Goto                 |
|  | Left         |  | Left                        |
|  | Enter        |  | OK                          |
|  | Right        |  | Right                       |
|  | Tone/Bal     |  | Audio / Lang I/II           |
|  | Down         |  | Down                        |



