


 


 


 
 






 



 



 
 
 

 
 
 

 




**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[ * ]/Display		Info
	Recall		Back
	Freeze		Options
	P.Mode		Format
	S.Mode		Dual


 
 
**Originalfernbedienung    Ersatzfernbedienung**

	Tv/Radio		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	TXT		Text
	Play		Play
	Pause/Time Shift		Pause
	Stop/EPG		Stop





Originalfernbedienung Ersatzfernbedienung

	Record		Rec
	<</Index		<<
	>>/Hold		>>
	I<</Reveal		I<<
	>>I/Subpage		>>I
	Mix/Fav List		Pre Ch
	Size/Subtitle		Subt
	Cancel/Audio		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung