


 

 

 

 

 



 

 

 

 

 





 
 
 






Originalfernbedienung Ersatzfernbedienung


 






 
 



 
 
 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	EPG/←		Guide
	Media		Media
	PIP/[ ]		3D
	Text/Disc-M		Text
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	End		Exit
	Info		Info
	Up		Up
	OK		Ok
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	<<		<<
	Play		Play






 

 



 

 

 

 

 

 

 





 
 


 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	>>		>>
	Pause		Pause
	Stop		Stop
	Rec/HDMI		Rec
	Sound		Dual
	→[ ]←/Zoom		Format
	O/Pop-Up-M		D. Menu
	Audio		Subt


 
 

 
 
 
 
 

 

 

 

 
 



 





 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	EPG/←		Guide
	Media		Media
	PIP/[ ]		3D
	Text/Disc-M		Text
	Menu		Menu
	End		Exit

Originalfernbedienung Ersatzfernbedienung




 

 



 

 

 

 

 

 

 





 
 


 


	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Pause		Pause
	Stop		Stop




 

 

 





 

 



 

 


 
 
 
 
 

 

 
 
 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	EPG/←		Guide
	Media		Media
	PIP/[ ]		3D
	Text/Disc-M		Text
	Menu		Menu
	End		Exit

 

 

 

**Originalfernbedienung Ersatzfernbedienung**

	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop
	O/Pop-Up-M		D. Menu
	→[ ]←/Zoom		Format
	Up		Up
	OK		Ok
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	P+		Ch +
	P-		Ch -

Originalfernbedienung Ersatzfernbedienung