

 





 


 









Originalfernbedienung Ersatzfernbedienung

	Speakers TV Audio Bravia Sync		Shift + Sound / Title
	Power AV Bravia Sync		Shift + Power
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	♥		Fav / Marker / PC
	[≡]		Text / Goto
	0		0
	Enter		Guide / EPG / -/--
	Red		Red / Netflix / Search





 















 

 





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Top Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home/Menu		Menu / Home
	Sound Mode		Sound / Title
	I<</Preset-		I<< / Preset-
	←		Shift + Left
	→		Shift + Right
	>>I/Preset+		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung






 









	<</Tuning-		<< / Tune-
	Play		Play / Slow
	>>/Tuning+		>> / Tune+
	[...]		Subtitle / EQ
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Mute		Mute / Dimmer
	Vol+		Vol+
	Prog+		CH+ / Page+
	Display		Display / Media
	O)))		Audio / Lang I/II
	Vol-		Vol-
	Prog-		CH- / Page-
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	♥		Fav / Marker / PC
	0		0
	Enter		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





 



















Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	Top Menu		D.Menu / Top
	Up		Up
	Pop Up Menu		Smart / List
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options/Tools		Setup / OPT /
	Function		Info / Angle
	Home/Menu		Menu / Home
	Sound Mode		Sound / Title
	I<</Preset-		I<< / Preset-
	←		Shift + Left
	→		Shift + Right
	>>I/Preset+		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung

	<</Tuning-		<< / Tune-
	Play		Play / Slow
	>>/Tuning+		>> / Tune+
	[...]		Subtitle / EQ
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Mute		Mute / Dimmer
	Vol+		Vol+
	Display		Display / Media
	O)))		Audio / Lang I/II
	Vol-		Vol-
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Speakers TV Audio Bravia Sync		Sound / Title	
	Power AV Bravia Sync		+	Shift + Power
	Power		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	♥		Fav / Marker / PC	
	[≡]		Text / Goto	
	0		0	
	Red		Red / Netflix / Search	
	Green		Green / APP / Repeat	



Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Top Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Home/Menu		Menu / Home
	[...]		Subtitle / EQ
	Mute		Mute / Dimmer
	Vol+		Vol+
	Prog+		CH+ / Page+
	Display		Display / Media
	Vol-		Vol-
	Prog-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

