



 



 
 

 
 

 

 

 
 
 



 



 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / AV		AV
	Open / Close		Eject
	Multimedia		Media
	List		List
	[≡] / Text		Text
	PSM		Shift + Format
	SSM		Shift + Dual
	I/II / Audio		Dual
	Stop		Stop
	Play		Play
	Pause / Step		Pause
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	>I< / Repeat		Shift + Text

 

 
 
 

 

 

 










 
 
 
 

 


 

 


Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	ARC		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red / Disc Menu		Red
	Green / Title		Green
	Yellow / Display		Yellow
	Blue / Return		Blue
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	PR +		Ch +
	PR -		Ch -





Originalfernbedienung Ersatzfernbedienung

	Q.View		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Clear		Shift + Exit
	A-B		3D
	Random		Smart
	Angle		Shift + Info
	Sub.T		Subt

Originalfernbedienung Ersatzfernbedienung

	Marker		Shift + Media
	Search		TV/R
	Program		Shift + Sleep
	Zoom		Shift + Eject
	[≡0] / Time		Shift + AV
	[≡ /] / Mix		Pre Ch
	[≡?] / Reveal		Guide
	[≡M] / Mode		D. Menu
	[≡X] / Update		Shift + TV/R
	[≡♦] / Size		Format
	[≡+] / Hold		Shift + Subt
	[≡i] / Index		Info

